



ENGINEERING EXCELLENCE

## Installation Guide

Two Handle Wallmount Faucet:

- 2PM440
- 2PM540


 
This product meets the following standards:

- ASME A112.18.1
- ANSI A117.1
- ANSI / NSF 61, SECTION 9
- CUPC / IAPMO LISTED / \*ADA COMPLIANT
- CONTAINS NO MORE THAN 0.25% WEIGHTED AVERAGE LEAD CONTENT



**Thank you for purchasing this Pioneer quality product.**

**Tools Required**

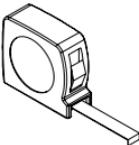
				
Adjustable Wrench	Teflon Tape	Tape Measure	Square	Level

**Prior to Installation**

- Observe all local plumbing and building codes before you begin installation.
- Carefully shut off both hot and cold main water supplies.
- Select pipe nipples long enough to extend through the finished wall.
- Pioneer reserves the right to make changes in the design of faucets without notice as specified in the pricebook.
- Carefully inspect drain and supply lines for any sign of damage.


## Faucet Installation

- Remove the old faucet if this installation is for replacement.
- Confirm the distance between inlet pipes from 3-1/2" (8.89 cm) to 8-1/2" (21.59 cm.) maximum apart. Apply the Teflon Tape or sealant at the end of inlet pipes if necessary.
- Hand tighten eccentric elbow (A) onto each 1/2" diameter inlet pipes.
- Thread the faucet (C) assembly onto the eccentric elbows (A). Note: Do not forget to place the washers (B) between the eccentric elbows (A) and the faucet (C).
- Confirm the eccentric elbows (B) are aligned and level with each other. Further tighten the elbows if necessary. Do not overtighten. Caution: Please be careful and do not damage the finish on the eccentric elbows (A) when installing.
- Verify the faucet (C) is properly aligned and level. If necessary make adjustments by repositioning the eccentric elbows (A).

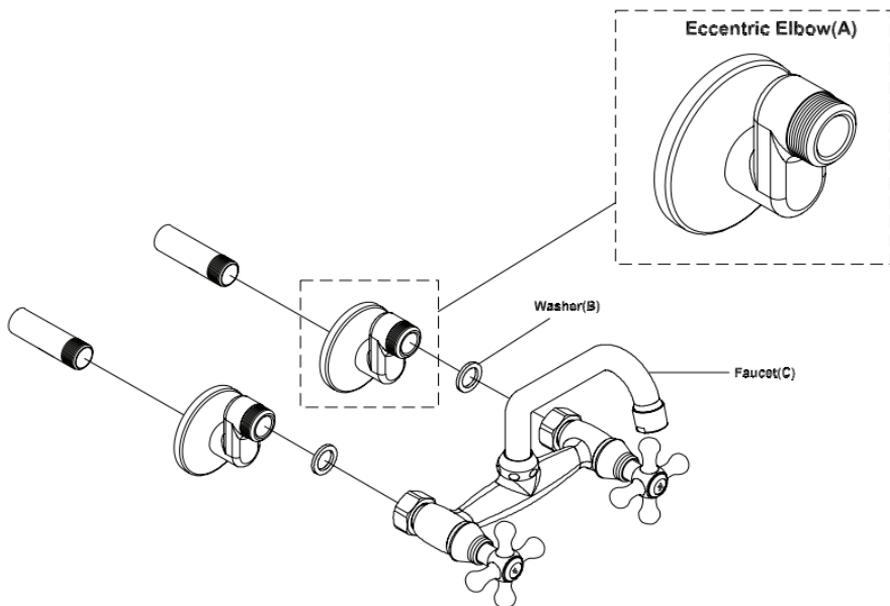

## Faucet Installation

- Ensure the eccentric elbow (A) is flushed with the finished wall (D).
- Remove aerator (E).
- Turn on water. Check for any leaks. Make sure all the connections are secure.
- Open the both side of handles.
- Allow water to run at full flow for at least one minute.
- Replace aerator (E).

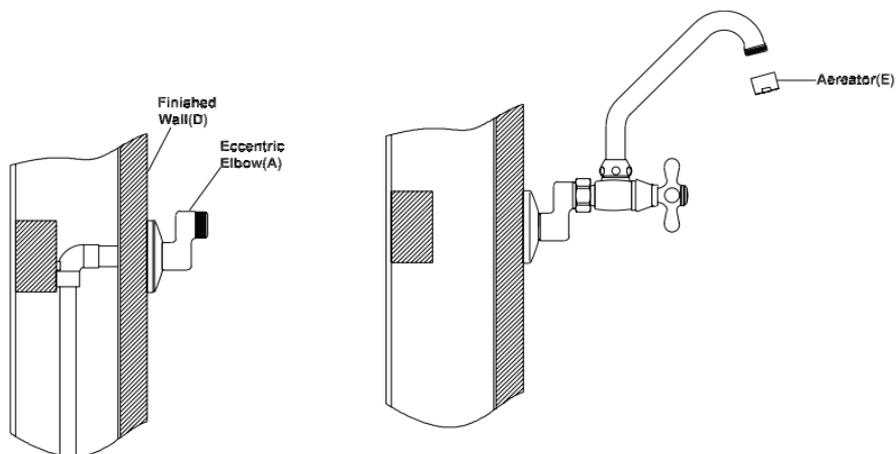

For more care information or trouble shooting inquiries about your Pioneer Product, please see the contact information on the back page.



ENGINEERING EXCELLENCE

3325 S. Garfield Ave. | Commerce, CA 90040  
Telephone: (800) 338-9468 | (323) 888-8873 | Fax: (323) 888-9515  
Hours: M - F, 7:30am to 5:00pm PST  
[www.pioneerind.com](http://www.pioneerind.com)