



### Tee w/ Cap

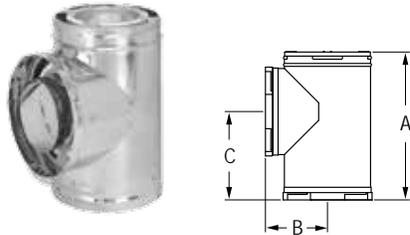

Use for through-the-wall chimney installations. The tee clean-out cap is removable for easy chimney cleaning or inspection. Wall Straps, a Wall Thimble, and a Tee Support must be installed with the Tee as directed. Tees have 1" insulating blanket. Ventilation air for chimney must be drawn from outdoors. (See installation instructions.)

SIZE	STOCK #	A	B	C
6"	9067	13 7/8"	7 1/2"	8 1/4"
6"	9067SS	13 7/8"	7 1/2"	8 1/4"
7"	9167	15 3/8"	8"	8 3/4"
7"	9167SS	15 3/8"	8"	8 3/4"
8"	9267	16"	8 1/2"	9"
8"	9267SS	16"	8 1/2"	9"


### Tee Support Bracket

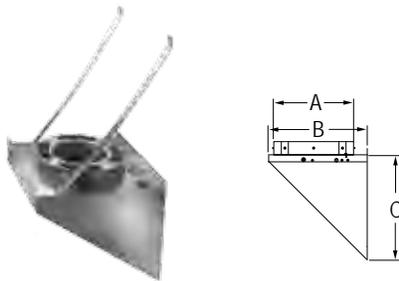

Use to support the Tee; suspended from a wall. Supports up to 35' of DuraPlus Chimney. Starter Section built in.

SIZE	STOCK #	A	B	C
6"	9072	10"	14"	12"
6"	9072SS	10"	14"	12"
7"	9172	11"	15"	13"
7"	9172SS	11"	15"	13"
8"	9272	12"	16"	14"
8"	9272SS	12"	16"	14"

### Adjustable Wall Strap

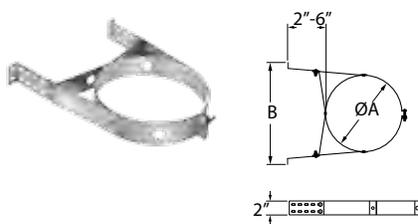

Use in interior or exterior installations to support and to stabilize the chimney while assuring a 2" clearance. Wall straps are required every 4' on exterior of building. Adjusts 2"-6" from wall.

SIZE	STOCK #	A	B
6"	9069	10"	16 1/8"
7"	9169	11"	17 1/8"
8"	9269	12"	18 1/8"