


Push, Pull, Pedal Push and Pedal Handle Push Button

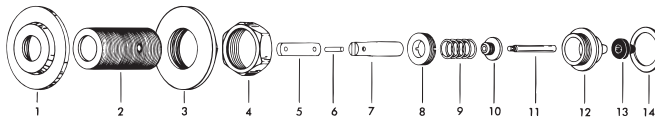

Pull Button For Concealed Royal® & Crown® (Seat Action)

Item

No.	Code No.	Part No.	Description
-----	----------	----------	-------------

Repair Kit


	3303394	C-62-A	Repair Kit contains item nos. 9-14
--	----------------	--------	------------------------------------

Repair Parts

1.	0302248	B-23	CP Wall Flange 2-3/4" O.D.
2.	—	C-30	In-Wall Sleeve. If required, consult factory.
3.	0302260	B-24	RB Locknut
4.	0301083	A-6	RB Coupling
5.	—	C-27	Link Available in Multiple Lengths. Consult factory.
6.	5303213	C-29	RB Pin
7.	—	C-31	Sleeve Available in Multiple Lengths. Consult factory.
8.	0203013	C-48	RB Sleeve Guide
9.	*	C-28	Spring
10.	*	C-32	Plunger Head
11.	*	C-24	Plunger Stem
12.	*	C-61	Special Bushing
13.	5302297	B-39	Seal
14.	5301139	A-31	Gasket

*Available in kit only.

Pedal Push Button For Exposed Royal® & Crown®

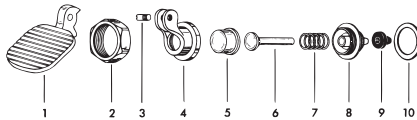

**Item No.
Code No.
Part No.**

Description


Repair Kit

	3302304	B-40-A	Repair Kit contains item nos. 4-10
--	----------------	--------	------------------------------------

Repair Parts

1-10.	0303289	C-33-A	Pedal RB Assembly
1.	0303293	C-34	CP Pedal
2.	0301082	A-6	Coupling
3.	5303298	C-35	CP Screw
4.	*	C-33	CP Socket
5.	*	C-37	CP Push Button
6.	*	B-8-A	Plunger (Special)
7.	0303019	C-7	Spring
8.	*	B-49	Bushing
9.	5302297	B-39	Seal
10.	5301140	A-31-P	Gasket

*Available in kit only.

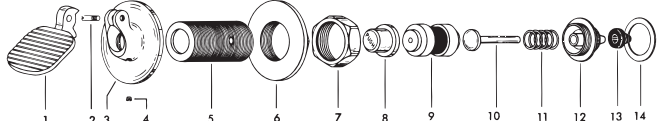

Pedal Push Button For Concealed Royal® & Crown®

Item

No.	Code No.	Part No.	Description
-----	----------	----------	-------------

Repair Kit


	—	C-40-A	Complete Pedal Push Button Assembly item nos. 1-14 LDIM required
	3303398	C-70-A	Push Button Repair Kit contains item nos. 10-14
	3303399	C-77-A	Push Button Repair Kit contains item nos. 10-14 – Triple Seal Cone Seal

Repair Parts

1.	0303293	C-34	CP Pedal
2.	5303298	C-35	CP Screw
3-4.	0303303	C-40	CP Flange w/Set Screw
5.	—	B-6	In-Wall Sleeve. If required, consult factory.
6.	0302260	B-24	RB Locknut
7.	0301082PO	A-6	RB Coupling
8.	0303002	C-2	Index Push Button
9.	—	B-15-A	N/A. Multiple lengths available. Consult factory.
10.	*	B-8-A	Plunger
11.	0303019	C-7	Spring
12.	*	B-41	Bushing
13.	5302297	B-39	Seal
14.	5301139	A-31	Gasket

*Available in kit only.

Pedal Handle Push Button For Exposed Royal® & Crown®

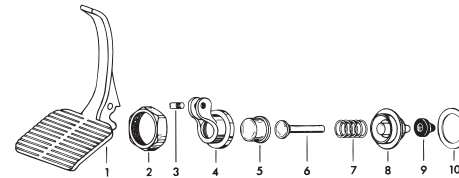

Item

No.	Code No.	Part No.	Description
-----	----------	----------	-------------

Repair Kit

	3302304	B-40-A	Repair Kit contains item nos. 4-10
--	----------------	--------	------------------------------------

Repair Parts

1-10.	0303290	C-33-A	Pedal Handle PB Assembly – OBSOLETE
1.	0303295	C-34	CP Pedal Handle – OBSOLETE
2.	0301082	A-6	Coupling
3.	5303298	C-35	CP Screw
4.	*	C-33	CP Socket
5.	*	C-37	CP Push Button
6.	*	B-8-A	Plunger (Special)
7.	0303019	C-7	Spring
8.	*	B-49	Bushing
9.	5302297	B-39	Seal
10.	5301140	A-31-P	Gasket

*Available in kit only.