

## Instructions for Moultrie Standard Feeder


THANK YOU for your purchase of a Moultrie Standard Quick-Lock Feeder. Please read this sheet before operating the unit. If you should have any questions about this product or any other Moultrie product, please contact us using the information on the back of this sheet.

### A ASSEMBLE MOULTRIE 30-GALLON QUICK LOCK HOPPER

- 1 Place hopper bottom flat on the ground, and slide the three provided angled leg brackets into the hopper as shown.

Make sure to fully insert brackets as far as you are able to ensure the strength of the feeder.

Angled Leg Brackets

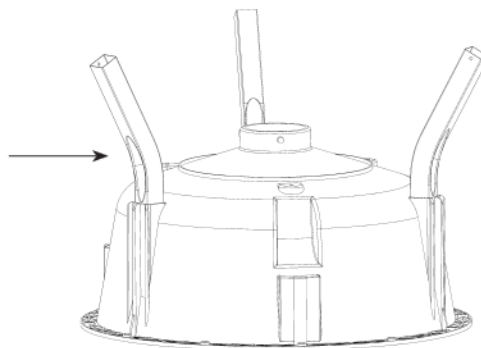

- 2 Insert two (2) leg sections into each of the square leg brackets. Tap leg sections into place to ensure tight fit.



Flip hopper bottom assembly upside-down so that all three (3) legs are on the ground.




- 3 Align holes of hopper top, then press sides of hopper bottom until it snaps snugly in place. Insert bolt through each hole, place lock washer on bolt and screw wingnut onto bolt until tight. Repeat for all 12 bolts.

**Note: Failure to properly secure two halves can result in leakage.**

After completing hopper assembly, install as many leg sections as are needed for your application.

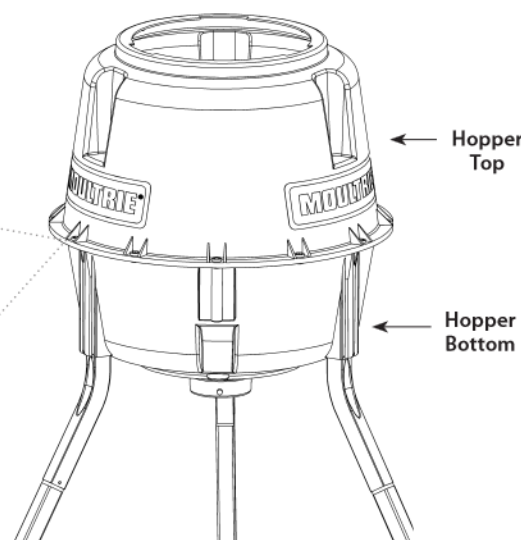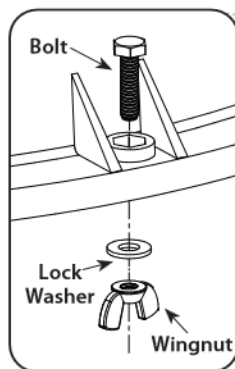


- 4 Connect Quick-Lock feeder kit to assembled hopper as shown.

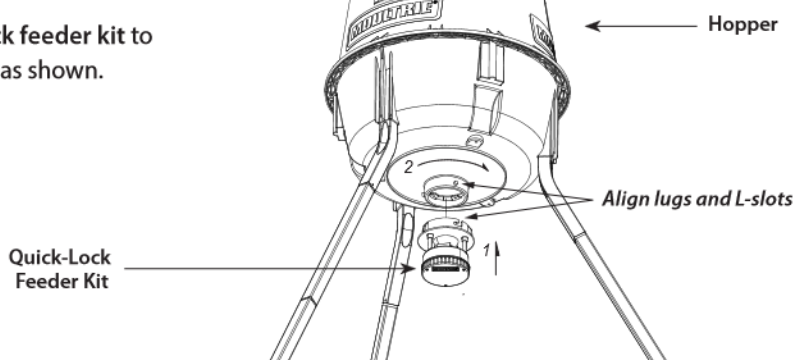

- 5 Fill with corn/feed. Do not exceed 200 lbs.

Install lid by aligning handles with notches in hopper top. Twist until lid rests flush against lid stop.

To install a Moultrie game camera or Feeder Power Panel (sold separately), thread included 1/4"-20 x 1" Phillips-head bolt upward through hole in lid handle and tighten bolt. Lid will hold up to 3 devices.

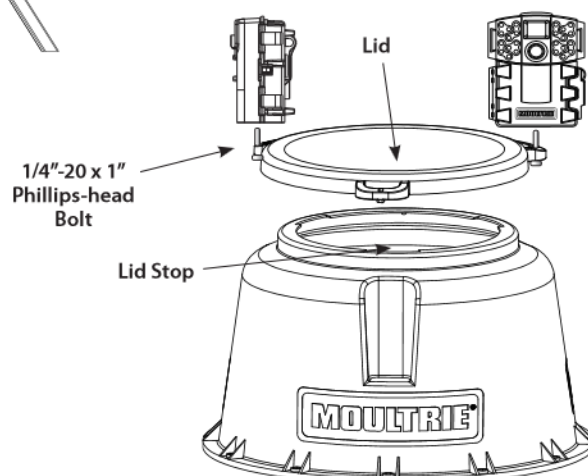

## B INSTALL BATTERIES




**CAUTION: WEAR EYE PROTECTION**

To install the batteries or adjust the feed settings, remove the bottom of the feeder by rotating it counter clockwise as shown. Install four (4) AA alkaline or lithium batteries with the negative side of the battery going to the battery holder spring clip. Replace bottom by rotating clockwise until secure.

**NOTE:** Do not mix old and new batteries.  
Always replace **ALL** the batteries at the same time.  
Do not mix battery types.  
If using solar panel, insert rechargeable batteries.


Rotate  
counter-clockwise  
to open

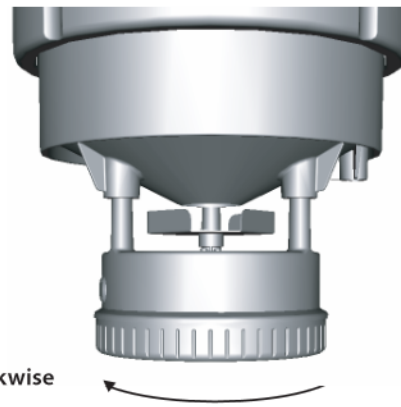

## C CONFIGURING AND TESTING FEEDER

**Your feeder will feed up to four times per day and has been factory set to feed at 7:00am and 6:00pm for 6 seconds. To change factory settings or add additional feed times, follow the instructions below.**

- 1 POSITION TIMER:** The timer may be rotated outward for easier viewing.  
Gently pull down on the button-side of the timer as shown.

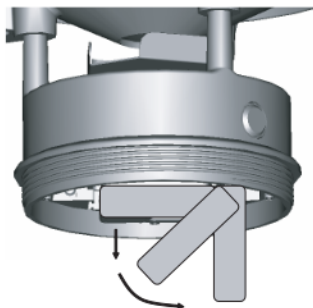

- 2 SET TIME OF DAY:** Press the UP or DOWN button until the correct time of day appears.  
Press and release button to single-step through the minutes or hold down to advance quickly.

- 3 SET FEED TIMES:** Press the SET button until the correct timer number appears as shown.  
Press the UP or DOWN button to set the Feed Time.

**Note: Factory settings are 7am and 6pm.**

- 4 SET RUN DURATION:** Press the SET button again to set the RUN-TIME SECONDS which can range from zero to twenty seconds. Adjust RUN-TIME SECONDS using the chart below. Set the RUN-TIME SECONDS to zero to disable the specific feed time. **Note: Factory setting is 6 seconds.**

RUN TIME (sec.)	4	6	8	10	12	14	16	18	20
Approx. Feed Dispensed (lbs.)	.8	1.0	1.3	1.6	1.9	2.2	2.4	2.7	3.0



**TEST FEEDER:** PRESS AND HOLD the SET button while the RUN-TIME SECONDS are displayed. Release the button and get away from the feeder when the message "TESTING GET AWAY" appears on the display.

**NOTE: DO NOT LOAD FEEDER until it is standing up and in place (see Section B-5).**

### Battery Information:

- Do Not Mix Old and New Batteries
- Do Not Mix Alkaline, Standard, or Rechargeable Batteries

### FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For devices approved under Part 15, the user's manual or instruction manual for an intentional or unintentional radiator shall caution the user about changes or modifications to the device (Section 15.21).

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**MOULTRIE®**

Our Service Department will gladly answer any questions you have.  
[www.moultriefeeders.com/support](http://www.moultriefeeders.com/support)

11162020 / MFG-13220