USE AND CARE

ROCKER SWITCHES

Left rocker switch controls blower and right rocker switch controls light. (FIG. 14)

BLOWER SWITCH

LIGHT SWITCH

Turns blower on to HIGH speed.

-\(\hat{\tau}\)- Turns light ON.

Turns blower OFF.

Turns light OFF.

5

Turns blower on to LOW speed.

CLEANING

Finish Keep your range hood clean using a mild detergent suitable for painted surfaces.

The aluminum filter should be cleaned frequently. Use a warm dishwashing detergent solution.

Clean all-metal filter using a non-phosphate detergent. Discoloration of the filter may occur if using phosphate detergents, or as a result of local water conditions - but this will not affect filter performance. This discoloration is not covered by the warranty. To minimize or prevent discoloration, hand wash filter using a mild detergent.

FILTER REMOVAL

Remove filter by pulling on its plastic tab.

LIGHT BULB REPLACEMENT

Replace the BXT Series range hood bulb using one LED light bulb (120 V, 7 W max., with GU10 base). Align the bulb leads with the small indentations located on the border of the lamp location on hood (see inset in **FIG. 15**), then install the bulb by placing the bulb leads into their grooves in the socket. NOTE: Do not fold the plate (grey part in **FIG. 15**) located in the light bulb housing. Gently push upwards and turn clockwise until secured. If desired, one shielded halogen bulb can also be used (GU10 base, 50 watts maximum).

A WARNING

Do not touch lamps during or soon after operation. Burns may occur. In order to prevent the risk of personal injury, only install shielded halogen lamps. Also, never install a cool beam, a dichroic lamp, a lamp not suitable for use in recessed luminaires or identified for use in enclosed fixtures.

