


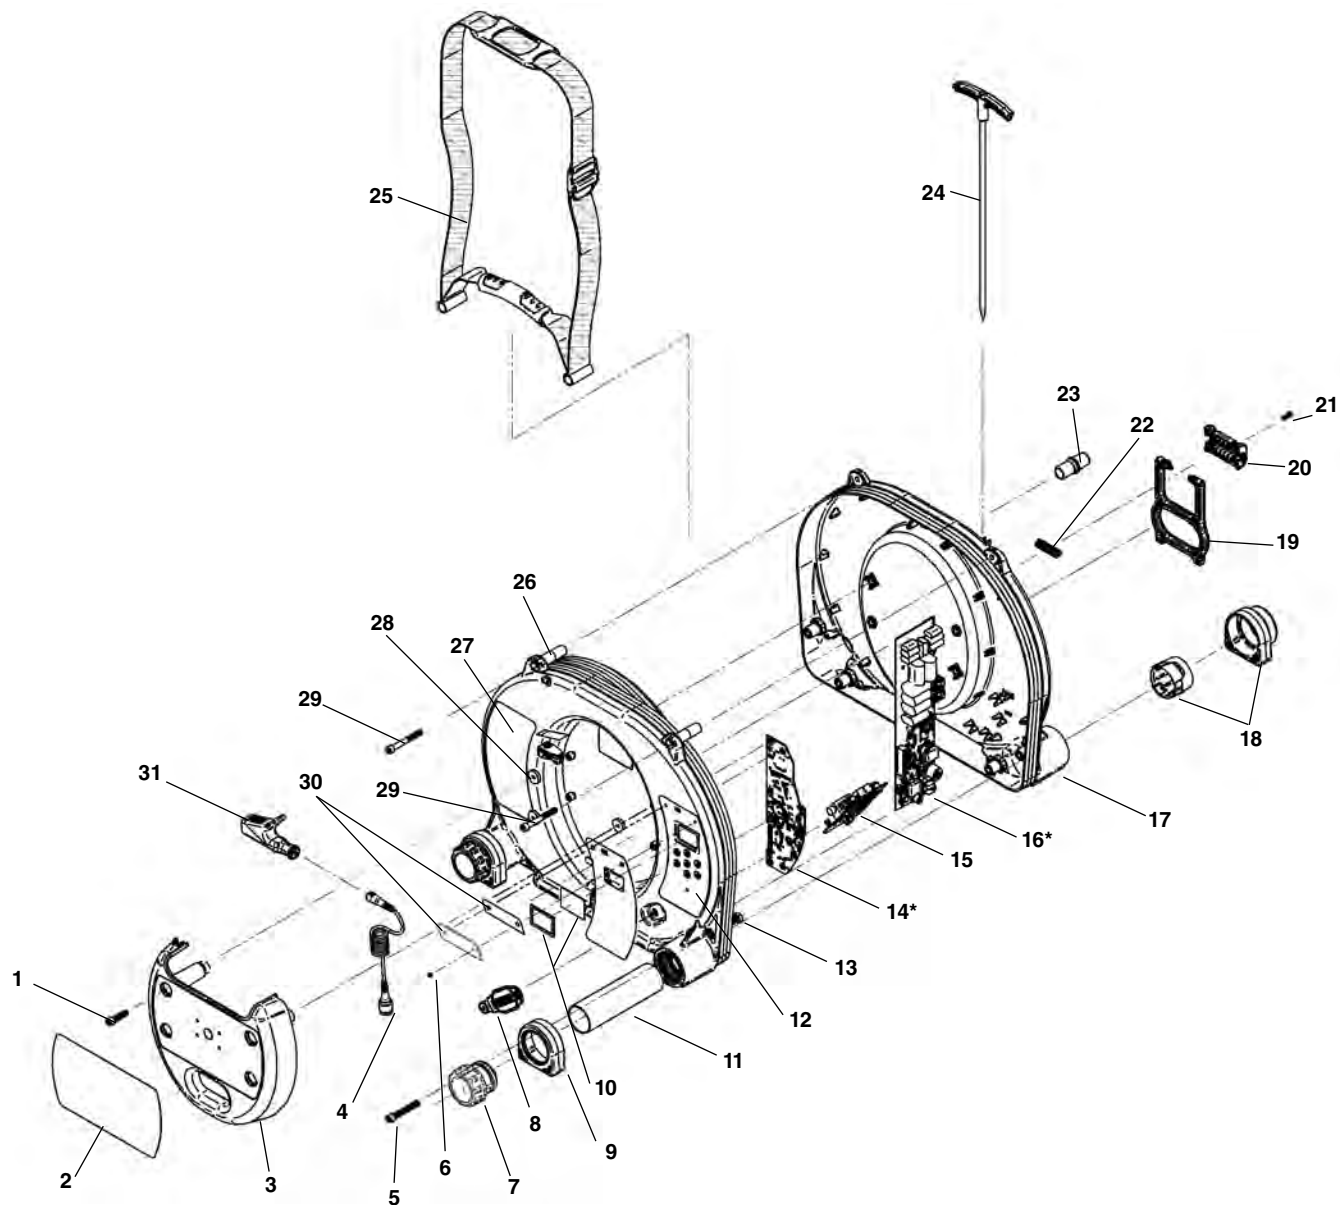

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	30643	Screw, 1/4" - 20 x 1" (4)	20	26538	Kickstand Bar
2	30673	RIDGID Decal	21	24413	Screw #6 x 1/2" (4)
3	26498	Cord Pocket	22	30628	Spring
4	26468	25' Cord Lead (2)	23	26548	Back Supports (2) (Standoff)
5	30633	Screw, 1/4" - 20 x 2" (2)	24	26463	Ground Stake
6	30648	Screw 4 - 40 x 1/4" (2)	25	26493	Shoulder Strap
7	26543	Seal Cap (Battery Cover)	26	26478	Front Shell
8	26488	Rubber Plug	27	30678	Front Directional Label
9	26508	End Cap Foot	28	26528	Plug F/Cord Pocket (6)
10	26513	LCD Window	29	30698	Screw, 1/4" - 20 x 1 3/4"
11	26518	Battery Tube (2)	30	30653	LCD Gasket Assembly
12	26523	LCD Interface Label	31	18443	Cable Clip (2)
13	30658	Hex Nut (1/4" - 20)	Items not Shown		
14*	30753	Control Board Assembly*			
15	30688	Drive Interface Board			
16*	30753	Driver Board Assembly*			
17	26483	Back Shell			
18	26508	Rear Foot w/Cover			
19	26533	Kickstand	30663	Rear Instruction Label	
			30658	Bottom Instruction Label	
			30668	Top Directional Strip Decal	
			30683	Rear Directional Label	
			27978	Power Supply US	
			27983	Power Supply Euro	

* Denotes MUST be replaced at factory.