
American Standard

HAMPTON *top mount kitchen faucets*

Installation Instructions

4770.702 SER. 4771.702 SER. 4770.712 SER. 4771.712 SER. 4770.722 SER. 4771.722 SER. 4770.732 SER. 4771.722 SER. 4771.222 SER. 4771.322 SER.

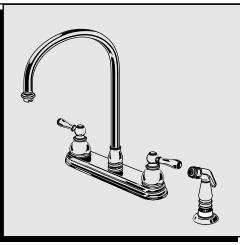


Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly–please read these instructions carefully before you begin.

Certified to comply with ANSI A112.18.1M U.S. Patent No. 5,819,789

M968145D

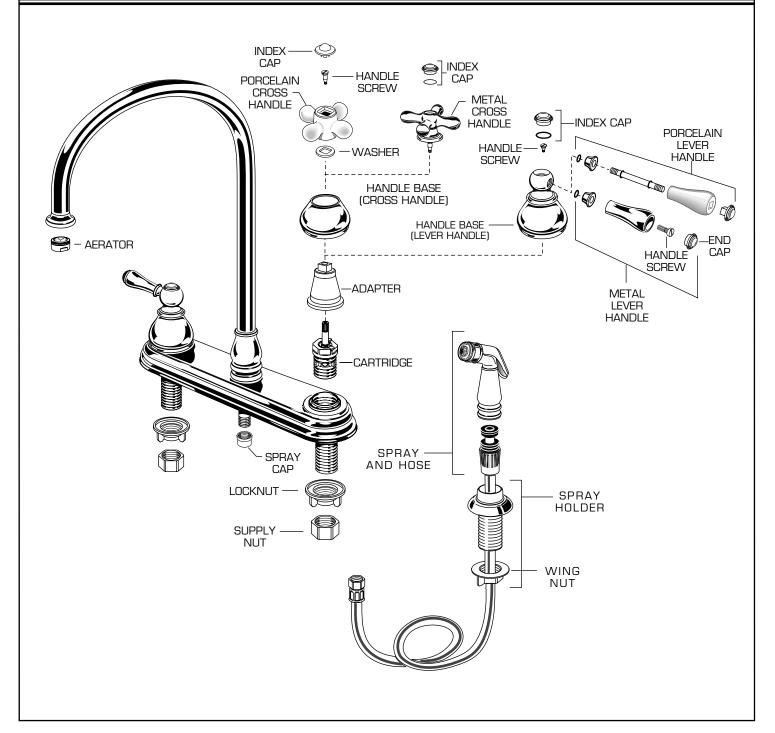

CAUTION

Turn off hot and cold water supplies before beginning.

- Screw SPOUT onto BODY.
- Place faucet in position on sink.
- Assemble and tighten LOCKNUTS from underside of SINK.
- Connect the HOT water supply to the left SHANK and the COLD water supply to the right SHANK using sealant, appropriate connectors, and COUPLING NUTS.
- To install SPRAY:
- Unscrew SPRAY CAP.
- Place the HOLDER into the appropriate mounting hole. Assemble the SPRAY HOLDER WING NUT onto the shank of SPRAY HOLDER from below and tighten.
- Feed SPRAY HOSE through HOLDER so SPRAY sits in HOLDER. PUTTY
- From underneath sink, attach COUPLING NUT of SPRAY HOSE to HOSE SHANK. Tighten COUPLING NUT firmly.

SINK ·



- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- SERVICE
- SERVICE
 STOP WASHER
 To change direction of handle rotation, proceed as follows:
 Turn valve to OFF position.
 Pull out INDEX CAP and remove HANDLE SCREW.
 Pull off HANDLE BASE and remove ADAPTER.
 Remove SPRING CLIP.
 Lift STOP WASHER, turn 90° and replace.
 Replace SPRING CLIP.
 Reinstall HANDLE.
 AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
 - If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.

Product names listed herein are trademarks of American Standard Inc. ©American Standard Inc. 1998

- COLD BODY SPRAY HOLDER SPRAY CAP HOSE $\overline{}$ SHANK WING NUT Ť LOCKNUT COUPLING NUT SPRAY HOSE COUPLING NUT SPRAY HOSE
 - Operate both handles to flush water lines thoroughly.
 - Operate SPRAY (if present).
 - Turn handles into OFF position and replace AERATOR.
 - Handle alignment.
 - Check alignment, if not satisfactory aligned;
 - Push out ADAPTER carefully.
 - Turn ADAPTER either 45° or 90° so that male square on ADAPTER catches different female square in HANDLE BASE.
 - Assemble and tighten MOUNTING SCREW.
 - Push INDEX CAP in top of HANDLE.





