

SPEAKMAN COMPANY

SE-4360 Installation, Operation, & Maintenance Instructions

GRAVITYFLO® PORTABLE EYEWASH CART

DESCRIPTION

GRAVITYFLO® Portable Eyewash Cart consists of four (4) chrome plated end posts; two (2) chrome plated shelves; ten (10) slip sleeves; two (2) free spinning wheels; two (2) lockable wheels; one (1) chrome plated push handle; one (1) 20 gallon collection bin with petcock drain; one (1) cross beam shelf support; one (1) cart spacer; two (2) 3/8" x 1" long bolts; one (1) 3/8" x 4" long bolt; seven (7) 3/8" flat washers; three (3) 3/8" nuts; and four (4) 3/8" lock washers.

SPECIFICATIONS

LENGTH: 34" (2' 10") with & without mounted SE-4300

WIDTH: 18" (1' 6") with & without mounted SE-4300

HEIGHT: 33.5" (2' 9-1/2") without & 65.75" (5' 5-3/4") with mounted SE-4300

SHIPPING WEIGHT: 44.0 LBS.


INSTALLATION

1. Remove the cart from its shipping packaging and insert the two (2) free spinning and two (2) lockable wheels into the bottom of all four (4) chrome plated end posts. 2. Fasten a pair of slip sleeves around the groove at the bottom of each of the four (4) posts. 3. Slide the bottom shelf over the top of all four (4) posts until it rests snugly on the slip sleeves. Make sure the two (2) lockable wheels are on the same side of the shelf. **Tip: if necessary, use a rubber mallet to further secure the shelf on the slip sleeves. Be sure to tap lightly to ensure slip sleeves are not damaged.** 4. Determine the height and side to place the handle bar. Fasten a pair of slip sleeves around the groove chosen for the handle on two (2) of the four (4) posts. 5. Slide the handle bar over the two (2) posts until it rests snugly on the slip sleeves. **Tip: If necessary, use a rubber mallet to further secure the handle.** 6. Fasten slip sleeves along the top groove of each of the four (4) posts. 7. Using the two (2) 3/8" x 1" long bolts, four (4) flat washers, two (2) lock washers, and two (2) nuts, attach the center cross support to the top shelf. **Tip: use the sixth top opening in the front and back rails of the top shelf.** 8. Slide the top shelf over the top of the four (4) posts until it rests snugly on the slip sleeves. **Tip: If necessary, use a rubber mallet to further secure the handle.** 9. Remove the wall bracket from the SE-4300 Tank. Place a lock washer and flat washer around the 3/8" x 4" long bolt and slide it through the hole at the bottom of the eyewash wall mounting bracket. 10. Attach the wall mount bracket to the SE-4300 eyewash unit by first latching the upper handle portion of the tank to the upper hook of the wall bracket. Position the bottom portion of tank onto the wall bracket so the drain fitting can be inserted through the drain hole of the tank and the hole in the wall bracket simultaneously. 11. Lock the drain fitting into place by assembling the washer and nut to the underside of the drain fitting. 12. Slide the bolt spacer and a flat washer over the exposed end of the bolt. Slip the bolt through the hole in center cross support. 13. Using a flat washer, lock washer, and nut secure the SE-4300 eyewash unit to the center cross support and top shelf of the safety cart. 14. Place the fluid collection bin on the bottom shelf of the cart to collect water dispensed from the drain fitting once the unit has been activated. **Tip: for tank filling, eyewash operation, visual inspection, and maintenance instructions, see SE-4300 installation, operation, and maintenance sheet.**

MAINTENANCE

This product does not require much maintenance. Should any repair be required, use only genuine Speakman parts for repair or replacement. For SE-4300 repair parts and maintenance instructions, see SE-4300 installation, operation, and maintenance sheet. To order parts or ask questions, call 1800-537-2107.

ROUGH-IN MEASUREMENTS

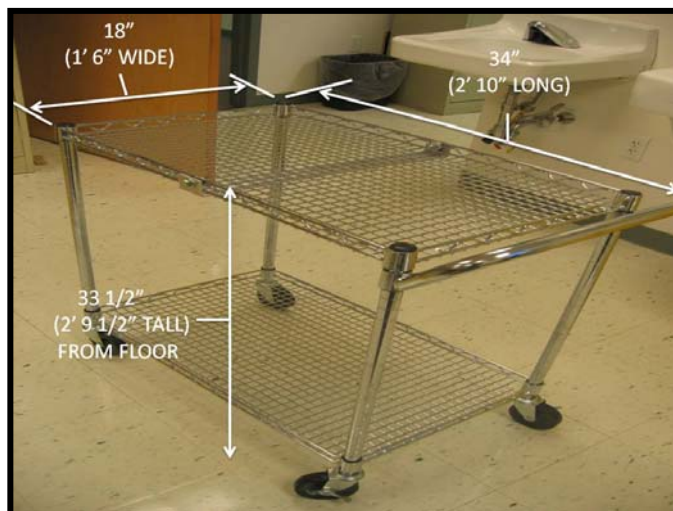

Product improvements may cause specification and dimensional changes without notice.

SPEAKMAN®

PO Box 191 Wilmington, DE 19899

Phone: 800-537-2107 Fax: 800-977-2747

Visit us on the web at www.speakmancompany.com

11/10
REV 1
92-3174



SPEAKMAN SE-4360

CART ASSEMBLY INSTALLATION INSTRUCTIONS





STEP 1 – INSERT THE WHEELS INTO THE BOTTOM OF ALL FOUR (4) POSTS.

STEP 2 – FASTEN A PAIR OF SLIP SLEEVES AROUND THE GROOVE AT THE BOTTOM OF EACH OF THE FOUR (4) POSTS.

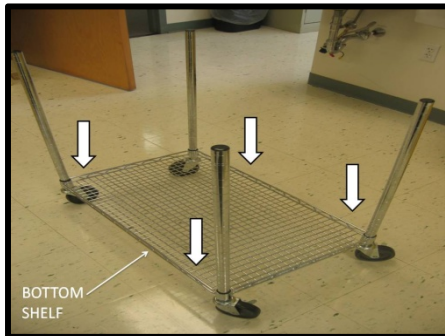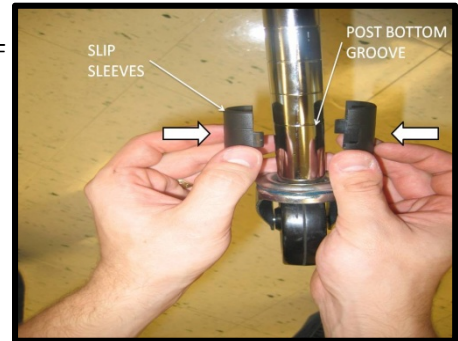



STEP 3 – SLIDE THE BOTTOM SHELF OVER THE TOP OF ALL FOUR (4) POSTS UNTIL IT RESTS. MAKE SURE THE TWO (2) LOCKABLE WHEELS ARE ON THE SAME SIDE OF THE SHELF. **TIP: IF NECESSARY, USE A RUBBER MALLET TO FURTHER SECURE THE SHELF.**

STEP 4 - DETERMINE THE HEIGHT AND SIDE TO PLACE THE HANDLE BAR. FASTEN A PAIR OF SLIP SLEEVES AROUND THE GROOVE CHOSEN FOR THE HANDLE ON TWO (2) OF THE FOUR (4) POSTS.

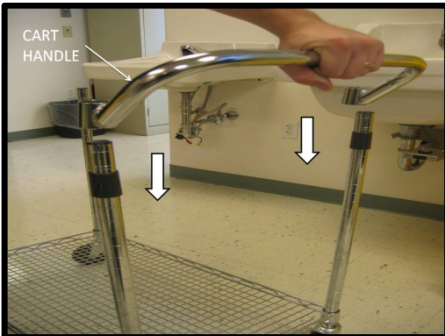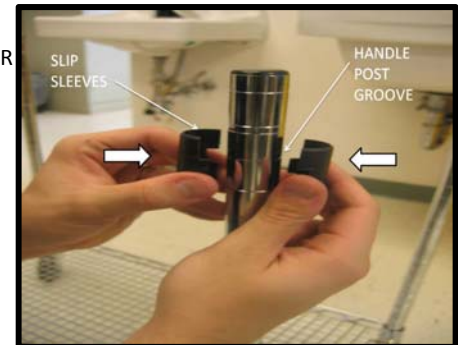


STEP 5 – SLIDE THE HANDLE BAR OVER THE TWO (2) POSTS UNTIL IT RESTS SNUGLY ON THE SLIP SLEEVES. **TIP: IF NECESSARY, USE A RUBBER MALLET TO FURTHER SECURE THE HANDLE.**

STEP 6 – FASTEN SLIP SLEEVES ALONG THE TOP GROOVE OF EACH OF THE FOUR (4) POSTS.

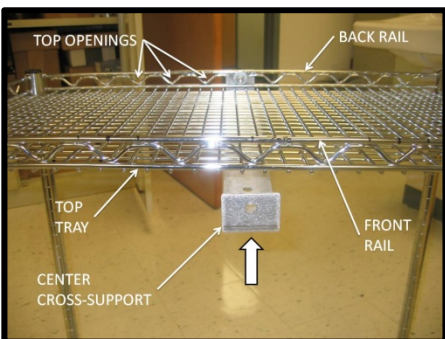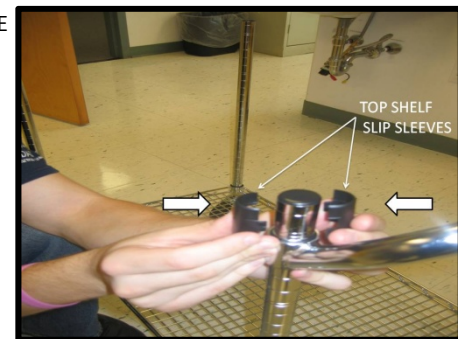

STEP 7 – USING TWO (2) 3/8" X 1" LONG BOLTS, FOUR (4) FLAT WASHERS, TWO (2) LOCK WASHERS, AND TWO (2) NUTS, ATTACH THE CENTER CROSS SUPPORT TO THE TOP SHELF. **TIP: USE THE SIXTH TOP OPENING IN THE FRONT/BACK RAILS OF THE TOP SHELF.**


STEP 8 – SLIDE THE TOP SHELF OVER THE TOP OF THE FOUR (4) POSTS UNTIL IT RESTS SNUGLY ON THE SLIP SLEEVES. **TIP: IF NECESSARY, USE A RUBBER MALLET TO FURTHER SECURE THE HANDLE.**

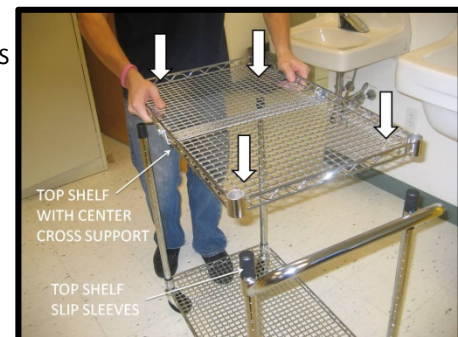

THE CART ASSEMBLY IS NOW COMPLETE. FOR MOUNTING THE EYEWASH UNIT, SEE BACK SIDE OF THIS SHEET.



SPEAKMAN SE-4360

EYEWASH MOUNTING INSTALLATION INSTRUCTIONS

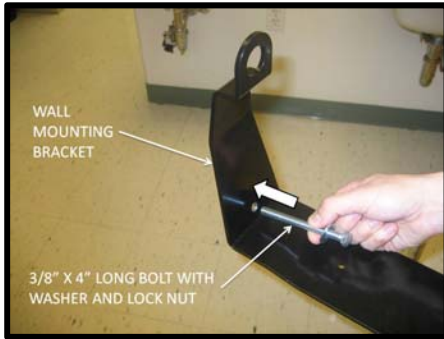


STEP 9 – PLACE A LOCK WASHER AND WASHER AROUND THE 3/8" X 4" LONG BOLT AND SLIDE IT THROUGH THE HOLE AT THE BOTTOM OF THE EYEWASH WALL MOUNTING BRACKET.

STEP 10 – ATTACH THE WALL MOUNT BRACKET TO THE EYEWASH UNIT BY FIRST LATCHING THE UPPER HANDLE PORTION OF THE TANK TO THE UPPER HOOK OF THE WALL BRACKET. POSITION THE BOTTOM PORTION OF THE TANK ONTO THE WALL BRACKET SO THE DRAIN FITTING CAN BE INSERTED THROUGH THE DRAIN HOLE OF THE TANK AND THE HOLE IN THE WALL BRACKET SIMULTANEOUSLY.

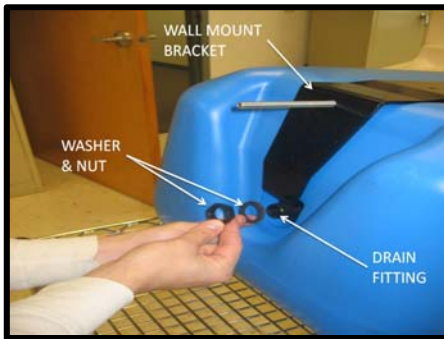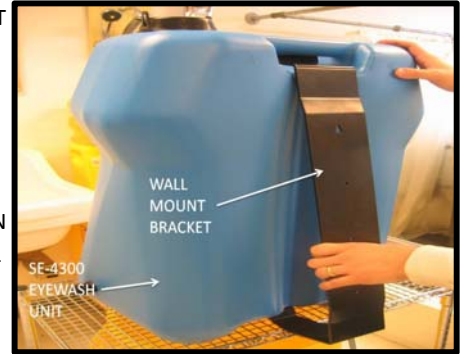

STEP 11 – LOCK THE DRAIN FITTING INTO PLACE BY ASSEMBLING WASHER AND NUT TO UNDERSIDE OF DRAIN FITTING.

STEP 12 – SLIDE BOLT SPACER AND WASHER OVER BOLT. SLIP BOLT THROUGH HOLE IN CENTER CROSS SUPPORT.

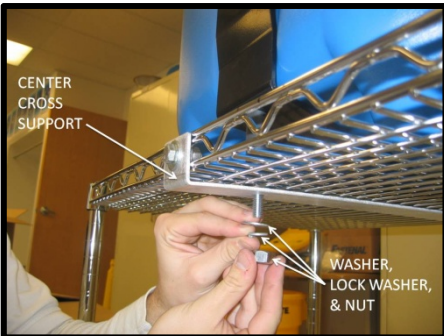


STEP 13 – USING A FLAT WASHER, LOCK WASHER, AND NUT, SECURE THE SE-4300 EYEWASH UNIT TO THE CENTER CROSS SUPPORT AND TOP SHELF OF THE SAFETY CART.

STEP 14 – PLACE THE FLUID COLLECTION STATION ON THE BOTTOM SHELF OF THE CART TO COLLECT WATER DISPENSED FROM THE DRAIN FITTING ONCE THE UNIT HAS BEEN ACTIVATED. **TIP: FOR TANK FILLING, OPERATION, VISUAL INSPECTION, AND MAINTENANCE INSTRUCTIONS, SEE SE-4300 INSTALLATION INSTRUCTION SHEET.**



STEP 15 - USE THE PETCOCK DRAIN ON THE SIDE OF THE COLLECTION STATION TO DRAIN WATER AFTER EACH USE.

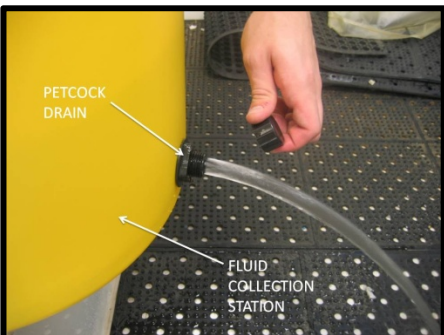

PART NO. 92-3173-R1

11/2010

SPEAKMAN®

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747
Visit us on the web at www.speakmancompany.com