
## SERVICE PARTS LIST



SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS M18™ Compact Brushless 1/4" Hex Impact Driver (3 Speed) 3651-20 **N61A** CATALOG NO. SERIAL NO. See Pages 2 & 3

REVISED BULLETIN DATE June 2024 WIRING INSTRUCTION

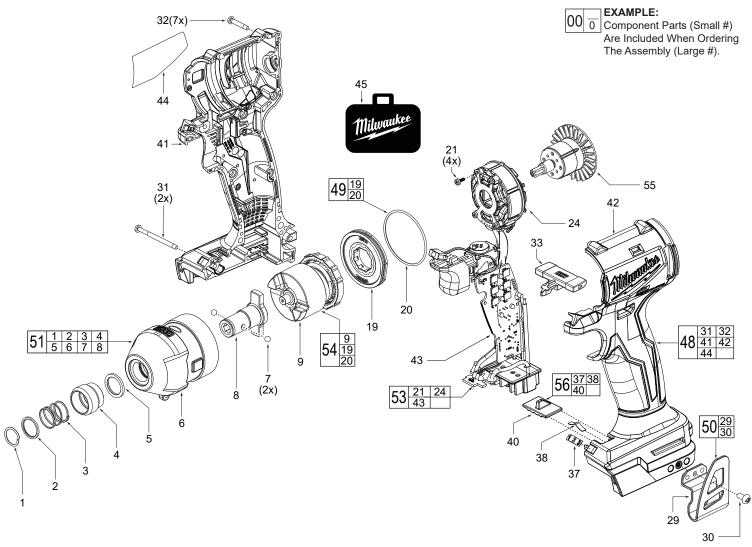

NO DEO

FIG.	PART NO.	DESCRIPTION OF PART NO	). REQ.
1	05-92-1010	Retaining Ring	(1)
2 3 4 5	45-88-2026	Washer	(1)
3	40-50-0056	Spring	(1)
4	42-76-0019	Sleeve	(1)
5	45-88-1547	Washer	(1)
6 7		Front Gear Case	(1)
7		Steel Ball	(2)
8		Anvil	(1)
9		Gearbox Mechanism	(1)
19		Gearcase Endcap	(1)
20	34-40-0304	O-Ring	(1)
21	05-88-0106	M2 x .89 PT Screw	(4)
24		Stator	(1)
29		Belt Clip	(1)
30	06-82-2500	6-32 x 5/16 Slt. Pan Hd. T-15 Mach. Sc.	(1)
31	06-82-2367		(2) (7)
32	06-82-6351	M3 x 16mm Pan Hd. ST T-10 Screw	(7)
33	45-24-9030	Shuttle	(1)
37		Speed Selector Label	(1)
38		Spring Plate	(1)
40		Speed Selector Switch w/ Magnet Assembly	
41		Handle Cover	(1)
42		Handle Support	(1)
43		Main PCBA	(1)
44	12-20-9890	Service Nameplate	(1)
45	42-55-2407	Contractor Bag	(1)
48	14-34-6610	Handle Housing Service Kit	(1)
49	14-30-6295	End Cap Service Kit	(1)
50	42-70-0950	Belt Clip Kit	(1)

DESCRIPTION OF BART

DADT NO


FIG.	PART NO.		O. REQ.
51	14-29-9005	Gearcase/Anvil Service Kit	(1)
53	14-20-9330	PCBA/Motor Stator Service Assembly	
54	14-34-6615	Gear Box Impacting Service Assembly Rotor Service Assembly	/ (1)
55	14-46-9865	Rotor Service Assembly	(1)
56	14-46-9807	Speed Selector Switch Service Kit	(1)

## **LUBRICATION** FIG.

Use Type 'J' Grease, No. 49-08-4220 (1 lb. can) Service grease may not be compatable with grease used during manufacturing. 90-95% of the old grease must be removed prior to any new grease being added.

- 8 Lightly coat front washer surface of anvil with grease, place a dab in the ball cavities of anvil.
- 51 Coat inside of bushing inside front gearcase with grease.
- NOTE: Do not wash impact assembly. Use a clean, dry cloth 54 to wipe away any excess grease or contamination.
- Lightly coat the I.D. of the ring gear and the center of the planet gears of impacting assembly with grease. 54
- 55 Coat pinion of rotor assembly with grease.


MILWAUKEE TOOL • www.milwaukeetool.com 13135 W. LISBON RD., BROOKFIELD, WI 53005

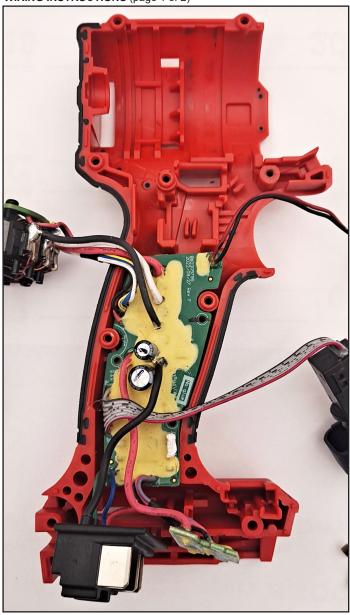


STEP 1: Place PCBA firmly and squarely in cavities of left housing halve.




**STEP 4:** Assemble gear box/impact assembly onto rotor pinion. Be sure gear box, rotor and stator are firmly and squarely seated in left housing halve and that the rotor fan has movement.

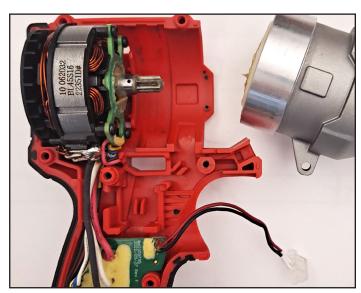

**STEP 2:** Carefully insert rotor into stator. Place rotor/stator in handle half at 15 degrees so rear rotor bearings fit into pocket and stator fits into grooves/ribs of left housing halve. Arrange wires as shown above.

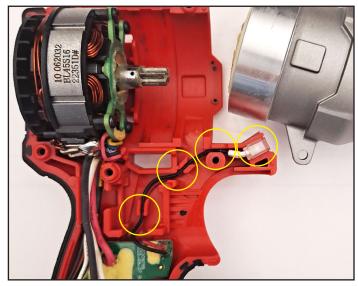


**STEP 3:** Install LED lens into housing halve recess. Route light wire in traps as shown in image above, with black wire above white wire.

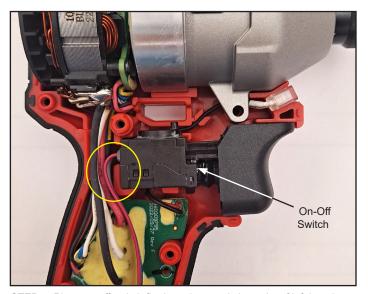


**STEP 5:** Place on-off switch firmly and squarely in cavity of left housing half. Be sure ribbon wire is tucked in channel, and all previously placed wires are still captured in properly in wire traps and channels.


## WIRING INSTRUCTIONS (page 2 of 2)

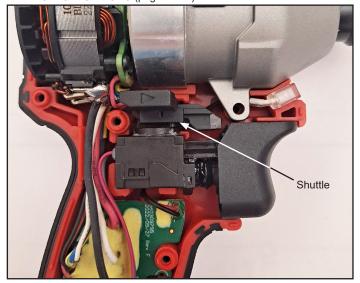

**STEP 6:** Install shuttle onto on-off switch being sure that top switch tab is captured in the bottom cavity of shuttle. Check for proper shuttle and switch functionality.

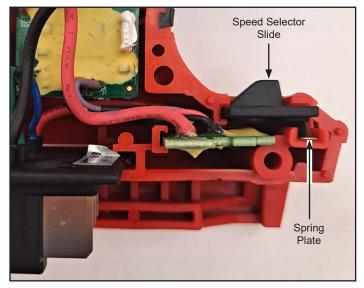

**STEP 8:** Install spring plate and speed selector slide into left housing halve.

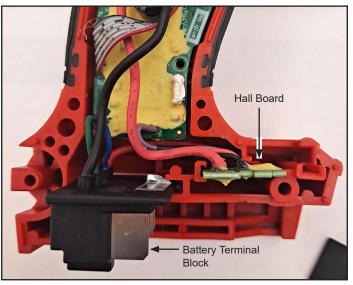

**STEP 7:** Place battery terminal block and hall sensor firmly and squarely into cavities of left housing halve. Be sure to capture hall sensor wires in trap as shown.



**STEP 9:** Check that all elements of electronics assembly are seated properly and that all wires are pressed completely down in wire traps and channels.

Carefully install right housing halve-cover onto left housing halve-support. Watch for pinched wires. Secure with nine housing halve screws.

Check functionality of shuttle, on-off switch and speed selector slide before installing battery.